

03-330 Removal and installation of radial ball bearing and closing ring in crankshaft

Special tools

Countersupport for internal puller



000 589 33 33 00


Internal puller 14.5 – 18.5 mm



000 589 25 33 00

Removal

- 1 Pull ball bearing and closing ring out of crankshaft together with countersupport and internal puller.

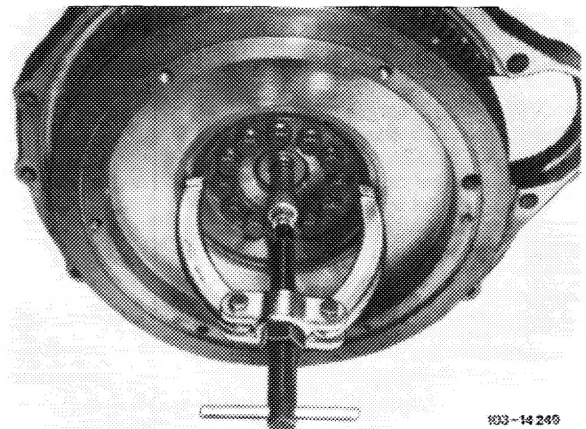

903-14 249

Installation

- 2 Provide new ball bearing with anti-friction bearing grease and knock into crankshaft by means of a suitable mandrel.
- 3 Knock-in closing ring.